 
 
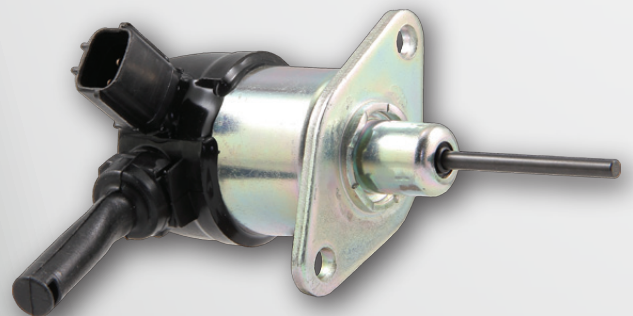 
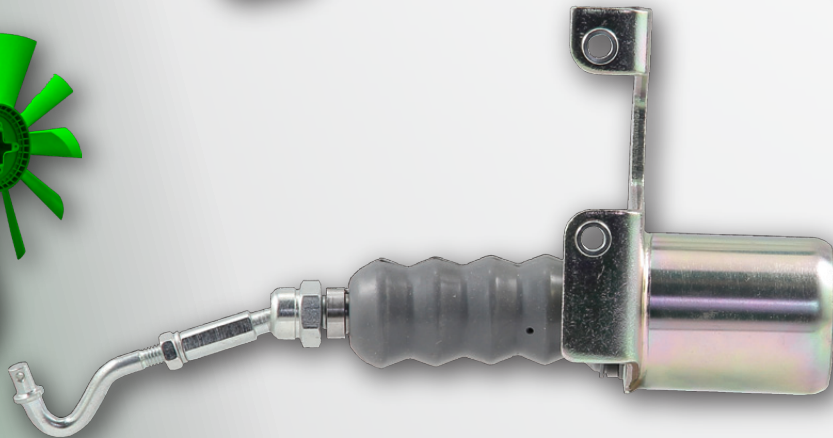 
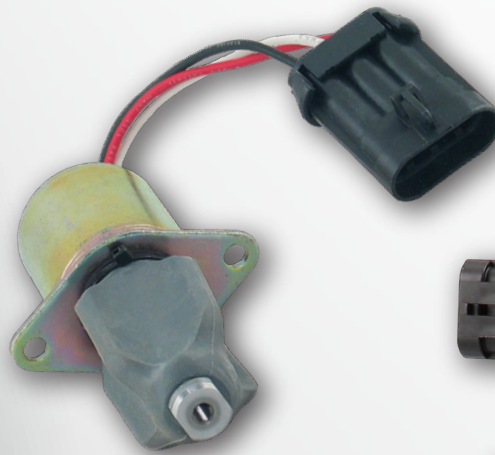 
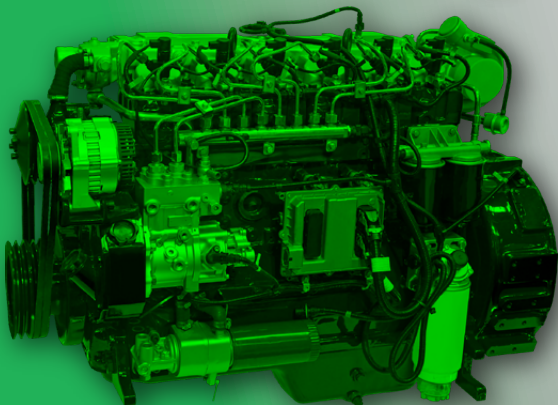 


SHUT-OFF SOLENOIDS SOLÉNOÏDES D'ARRETÉ SOLENOIDES DE CIERRE

ILLUSTRATED GUIDE • GUIDE ILLUSTRÉ • GUÍA ILUSTRADA

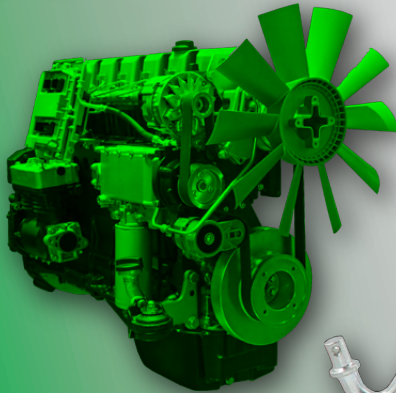

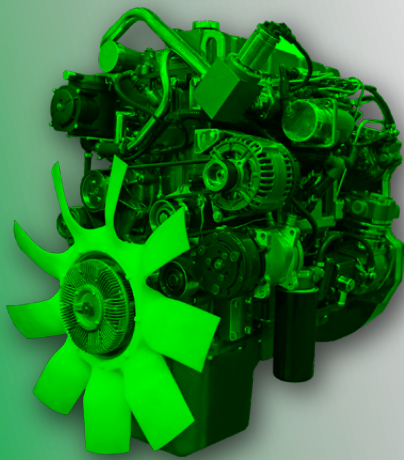

SHUT OFF SOLENOIDS • SOLÉNOÏDES D'ARRÊT • SOLENOIDES DE CIERRE

Illustrated Guide • Guide Illustré • Guía Ilustrada

Note: Other units not in this catalogue may be available upon your request.
For additional application information refer to our online catalog at www.dixie-electric.com

Note: Unités ne figurant pas dans ce catalogue peuvent être disponibles sur votre demande.
Pour information supplémentaire, consultez notre catalogue en ligne à www.dixie-electric.com

Nota: Otras unidades que no aparecen en este catálogo podrían estar disponibles a solicitud del interesado.
Para obtener información adicional acerca de las aplicaciones, consulte nuestro catálogo electrónico en www.dixie-electric.com

The information contained herein is based on the data which we believe to be correct and has been obtained from sources which we regard reliable, however, we assume no liability for errors or omissions therein. Permission to reproduce entirely and/or in part is denied.

L'information contenue est fondée sur des données que nous croyons être correctes et a été obtenue de sources que nous considérons fiables, mais nous n'assumons aucune responsabilité pour les erreurs et omissions. Permission de reproduire entièrement et/ou partiellement est interdite.

La información contenida aquí está basada en datos que creemos correctos y se ha obtenido de fuentes que creemos confiables, sin embargo no asumimos ninguna responsabilidad por errores u omisiones. Se niega el permiso de reproducirse en enteramente y/o en parte.

TABLE OF CONTENTS • TABLE DES MATIERES • TABLA DE CONTENIDOS

TITLE • TITRE • TÍTULO	PAG.
APPLICATIONS/ENGINES APPLICATIONS/MOTEURS APLICACIONES/MOTORES	III
HOW TO USE THIS CATALOG COMMENT UTILISER CE CATALOGUE CÓMO UTILIZAR ÉSTE CATÁLOGO	IV
NUMERICAL INDEX INDEX NUMÉRIQUE ÍNDICE NUMÉRICO	V
ILLUSTRATED GUIDE GUIDE ILLUSTRÉ GUÍA ILUSTRADA	1 - 20
CROSS REFERENCE GUIDE DE RÉFÉRENCE CRUCE DE REFERENCIAS	22 - 25

APPLICATIONS/ENGINES APPLICATIONS/MOTEURS APLICACIONES/MOTORES	PAG.
Bobcat	1 - 2
Carrier Transicold	2
Case IH	2
Caterpillar	3 - 5
Cummins	5 - 7
Deutz	7 - 9
Ford	9
Gehl	9
Hyster	10
John Deere	10
Komatsu	10
Kubota	11 - 14
Lister Petter	14
Mitsubishi	14
Perkins	15
Thermo King	15
Volkswagen	16
Volvo	16 - 18
Yanmar	19 - 20

**HOW TO USE THIS CATALOG
COMMENT UTILISER CE CATALOGUE
CÓMO UTILIZAR ÉSTE CATÁLOGO**

12V



24V



 
PART NUMBER
NUMÉRO D'ARTICLE
NUMERO DE PARTE

12V

Application:
Application:
Aplicación:
Abc...

Replaces:
Remplace:
Reemplaza:
Xyz...

Plug
Connecteur
Enchufe



Picture
Photo
Foto

PART NUMBER
NUMÉRO D'ARTICLE
NUMERO DE PARTE

24V

Application:
Application:
Aplicación:
Abc...

Replaces:
Remplace:
Reemplaza:
Xyz...

NUMERICAL INDEX • INDEX NUMÉRIQUE • ÍNDICE NUMÉRICO

DIXIE	PAG.
6785-1511K	15
6785-2312	16
6785-2521	17
6785-5112	17
6785-5113	1, 5, 19
6785-5311	18
6785-15100	1
6785-15101	11
6785-15102	19
6785-15103	10, 19
6785-15104K	1, 2, 11
6785-15105	10, 20
6785-15106K	2
6785-15107	11
6785-15108	3, 6
6785-15109	14
6785-15110	10, 15
6785-15111	11
6785-15112	12
6785-15113	12
6785-15114	12
6785-15115	1, 12
6785-15116	13
6785-15201	11
6785-15202	19
6785-15203	10, 19
6785-15204K	1, 2, 11
6785-15205	10, 20
6785-15206K	2
6785-15207	11
6785-15208	3, 6
6785-15209	14
6785-15210	10, 15
6785-15219	6, 10
6785-20101	14
6785-20201	14
6785-46101	13
6785-46102	13
6785-46103	13
6785-50101	14

DIXIE	PAG.
6785-50201	14
6785-51101	6
6785-51102	7
6785-51201	6
6785-51202	7
6785-56102	14
6785-56202	14
6785-72101	7
6785-76101	7
6785-76102	8
6785-76103	8
6785-76201	7
6785-76202	8
6785-76203	8
6785-77101	3, 6
6785-77102	7, 9, 16
6785-77201	3, 6
6785-77202	7, 9, 16
6785-78101	2, 8, 9
6785-78102	8
6785-78103	2, 9
6785-78104	9, 16
6785-78201	2, 8, 9
6785-78202	8
6785-84101	3
6785-84201	3
6785-85101	3, 15
6785-86201	4
6785-87101	4
6785-87102	4
6785-87103	4
6785-87104	5
6785-87201	4
6785-87202	4
6785-87203	4
6785-87204	5
6785-88101	5
6785-88201	5
6785-89101	5, 15



SHUT OFF SOLENOIDS • SOLÉNOÏDES D'ARRÊT • SOLENOIDES DE CIERRE

Illustrated Guide • Guide Illustré • Guía Ilustrada

12V

24V

<p>6785-5113 12V</p> <p>Application: Bobcat, Cummins, Volvo, Yanmar</p> <p>Replaces: Bobcat: 6667993, 6681513 Cummins: 3832211, 3919422, 3927152, 3934171, 3934972 Synchro-Start: SA-4260-12, SA-4754-12 Woodward: 1753ES-12A6UC3B1 Yanmar: 129953-77803, 129953-77810</p>	<p>A= Ground (Black) B= Pull (White) C= Hold (Red)</p>  	
<p>6785-15100 12V</p> <p>Application: Bobcat</p> <p>Replaces: Bobcat: 6681512</p>	<p>A= Ground (Black) B= Pull (White) C= Hold (Red)</p>  	
<p>6785-15104K 12V</p> <p>Application: Bobcat, Carrier Transcold, Kubota</p> <p>Replaces: Bobcat: 6689034 Carrier Transcold: 25-15230-01, 29-70167-00 Kubota: 1G577-60011 Synchro-Start: SA-4561T Woodward: 1503ES-12A5UC9S</p>	<p>A= Hold (Red) B= Pull (White) C= Ground (Black)</p>  	<p>6785-15204K 24V</p> <p>Application: Carrier Transcold, Kubota</p> <p>Replaces: Woodward: 1503ES-24A5UC9S</p>
<p>6785-15115 12V</p> <p>Application: Bobcat, Kubota</p> <p>Replaces: Bobcat: 6691498 Kubota: 1G925-60011 Woodward: 1503ES-12A5UC4S</p>	<p>A= Ground (Black) B= Pull (White) C= Hold (Red)</p>  	

Bobcat, Carrier Transicold

12V

 
 
6785-78101
12V

Application:

Bobcat, Deutz, Gehl

Replaces:

Bobcat: 6680121, 6686715
Deutz: 04272733
Gehl: 133499

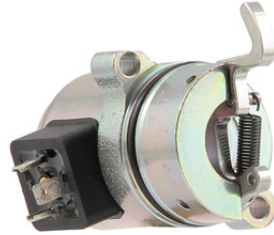

24V

6785-78201
24V

Application:

Deutz

Replaces:

Deutz: 04272734

 
6785-78103
12V

Application:

Bobcat, Deutz

Replaces:

Bobcat: 6686715
Deutz: 04272956

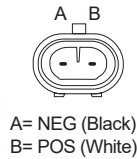

6785-15104K
12V

Application:

 
Bobcat, Carrier Transicold, Kubota

Replaces:

Bobcat: 6689034
Carrier Transicold: 25-15230-01,
29-70167-00
Kubota: 1G577-60011
Synchro-Start: SA-4561T
Woodward: 1503ES-12A5UC9S



A= Hold (Red)
B= Pull (White)
C= Ground (Black)

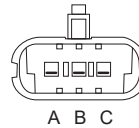

6785-15204K
24V

Application:

Carrier Transicold, Kubota

Replaces:

Woodward: 1503ES-24A5UC9S

6785-15106K
12V

Application:

 
Carrier Transicold

Replaces:

Carrier Transicold: 25-38109-00, -02SV,
-03ASV, -03SV, -04, -04SV, -05, -05SV,
-06, -06SV
Synchro-Start: SA-4668-S, SA-5019,
SA-5157
Woodward: 1503ES-12A5SUC9SCC28,
1503ES-12A5SUC9SCG28



A= Hold (Red)
B= Pull (White)
C= Ground (Black)

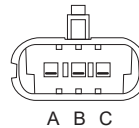

6785-15206K
24V

Application:

Carrier Transicold

Replaces:

Woodward: 1503ES-24A5SUC9SCC28,
1503ES-24A5SUC9SCG28

12V

24V

<p>6785-77101 12V</p> <p>Application: Case-IH, Cummins</p> <p>Replaces: Case-IH: J932529 Cummins: 3991167 Synchro-Start: SA-4941-12</p>	  <p>A B C A= Hold (Red) B= Pull (White) C= Ground (Black)</p>	<p>6785-77201 24V</p> <p>Application: Cummins</p> <p>Replaces: Cummins: 3991168 Synchro-Start: SA-4941-24</p>
<p>6785-15108 12V</p> <p>Application: Caterpillar, Cummins</p> <p>Replaces: Cummins: 3864274 Synchro-Start: SA-3766T Woodward: 1751-12E7U1B1S5A</p>	 	<p>6785-15208 24V</p> <p>Application: Caterpillar</p> <p>Replaces: Woodward: 1751-24E7U1B1S5A</p>
<p>6785-84101 12V</p> <p>Application: Caterpillar</p> <p>Replaces: Caterpillar: 4N3889</p>	 	<p>6785-84201 24V</p> <p>Application: Caterpillar</p> <p>Replaces: Caterpillar: 4N3890</p>
<p>6785-85101 12V</p> <p>Application: Caterpillar, Perkins</p> <p>Replaces: Caterpillar: 173-1338 Perkins: 2848A278</p>	  <p>A B C A= Hold (Red) B= Pull (White) C= Ground (Black)</p>	

Caterpillar

12V

24V

<p>6785-86201 24V</p> <p>Application: Caterpillar</p> <p>Replaces: Caterpillar: 155-4653</p>	 <p>The diagram shows a solenoid with a red cap and a wiring diagram. The diagram has four terminals: 'STOP' (top), 'START' (left), 'GND' (right), and 'PUSH' (bottom). A central line connects 'STOP' and 'START'.</p>	<p>6785-86201 24V</p> <p>Application: Caterpillar</p> <p>Replaces: Caterpillar: 155-4653</p>
<p>6785-87101 12V</p> <p>Application: Caterpillar</p> <p>Replaces: Caterpillar: 110-6466</p>	 <p>The diagram shows a solenoid with two terminals. Above the terminals is a polarity diagram with a '+' sign on the left and a '-' sign on the right.</p>	<p>6785-87201 24V</p> <p>Application: Caterpillar</p> <p>Replaces: Caterpillar: 110-6465</p>
<p>6785-87102 12V</p> <p>Application: Caterpillar</p> <p>Replaces: Caterpillar: 6N-9988</p>	 <p>The diagram shows a solenoid with two terminals. Above the terminals is a polarity diagram with a '+' sign on the left and a '-' sign on the right.</p>	<p>6785-87202 24V</p> <p>Application: Caterpillar</p> <p>Replaces: Caterpillar: 6N-9987</p>
<p>6785-87103 12V</p> <p>Application: Caterpillar</p> <p>Replaces: Caterpillar: 155-4651, 8C-3664</p>	 <p>The diagram shows a solenoid with a red cap and a wiring diagram. The diagram has four terminals: 'STOP' (top), 'START' (left), 'GND' (right), and 'PUSH' (bottom). A central line connects 'STOP' and 'START'.</p>	<p>6785-87203 24V</p> <p>Application: Caterpillar</p> <p>Replaces: Caterpillar: 155-4652, 8C-3663</p>

12V

24V

<p>6785-89101 12V</p> <p>Application: Caterpillar, Perkins</p> <p>Replaces: Caterpillar: 324-4598, 365-3339, 425-7981 Perkins: U85206520</p>	 	
<p>6785-5113 12V</p> <p>Application: Bobcat, Cummins, Volvo, Yanmar</p> <p>Replaces: Bobcat: 6667993, 6681513 Cummins: 3832211, 3919422, 3927152, 3934171, 3934972 Synchro-Start: SA-4260-12, SA-4754-12 Woodward: 1753ES-12A6UC3B1 Yanmar: 129953-77803, 129953-77810</p>	<p>A= Ground (Black) B= Pull (White) C= Hold (Red)</p>  	
<p>6785-87104 12V</p> <p>Application: Caterpillar</p> <p>Replaces: Caterpillar: 9X-5312, 125-5771</p>	 	<p>6785-87204 24V</p> <p>Application: Caterpillar</p> <p>Replaces: Caterpillar: 125-5772</p>
<p>6785-88101 12V</p> <p>Application: Caterpillar</p> <p>Replaces: Caterpillar: 125-5773</p>	 	<p>6785-88201 24V</p> <p>Application: Caterpillar</p> <p>Replaces: Caterpillar: 125-5774, 6T-4121, 6T-4122</p>

Cummins

12V

24V

6785-51101

 
12V

Application:


Cummins

Replaces:

Cummins: 3974947
Synchro-Start: SA-3742-12



 A= Hold (Red)
B= Pull (White)
C= Ground (Black)

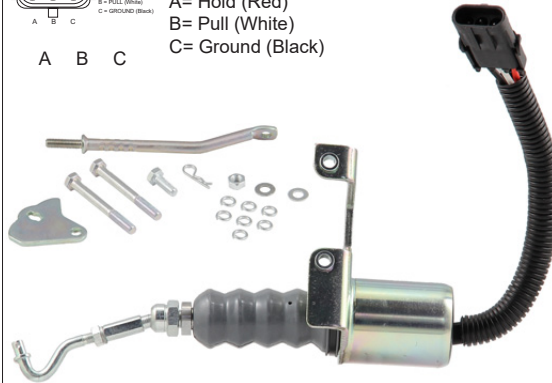

6785-51201

24V

Application:

Cummins

Replaces:

Synchro-Start: SA-3742-24

6785-15108

 
 
12V

Application:

Caterpillar, Cummins

Replaces:

Cummins: 3864274
Synchro-Start: SA-3766T
Woodward: 1751-12E7U1B1S5A

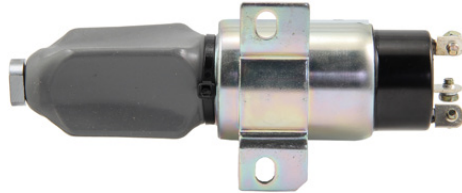

6785-15208

24V

 
 
Application:

Caterpillar

Replaces:

Woodward: 1751-24E7U1B1S5A

A= Hold (Red)
B= Pull (White)
C= Ground (Black)

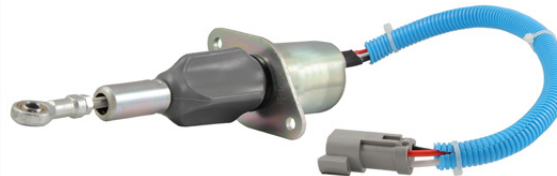

6785-15219

24V

Application:

Cummins, Komatsu

Replacing:

Cummins: 4063712
Komatsu: 674-381-9141
Synchro-Start: SA-5030-24

6785-77101

 
12V

Application:


Case-IH, Cummins

Replaces:

Case-IH: J932529
Cummins: 3991167
Synchro-Start: SA-4941-12



 A= Hold (Red)
B= Pull (White)
C= Ground (Black)

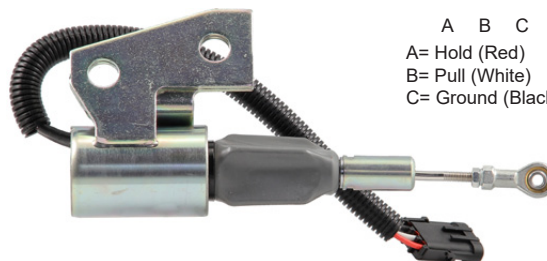

6785-77201

24V

Application:

Cummins

Replaces:

Cummins: 3991168
Synchro-Start: SA-4941-24

12V

24V

<p>6785-77102 12V</p> <p>Application: Cummins, Ford, Volkswagen</p> <p>Replaces: Cummins: 3935649, 4946639 Ford: BG2X-9N392-AA Volkswagen: 2UO130764 Synchro-Start: SA-4764-12</p>	  <p>A B C A= Hold (Red) B= Pull (White) C= Ground (Black)</p>	<p>6785-77202 24V</p> <p>Application: Deutz</p> <p>Replaces: Cummins: 3935650 Synchro-Start: SA-4764-24</p>
<p>6785-51102 12V</p> <p>Application: Deutz</p> <p>Replaces: Synchro-Start: SA-3765-12</p>	  <p>*Left mounted *Monté sur la gauche *Montado a la izquierda</p>	<p>6785-51202 24V</p> <p>Application: Deutz</p> <p>Replaces: Synchro-Start: SA-3765-24</p>
<p>6785-72101 12V</p> <p>Application: Deutz</p> <p>Replaces: Deutz: 04234373, 3309F139, 35DZS1E2</p>		
<p>6785-76101 12V</p> <p>Application: Deutz</p> <p>Replaces: Deutz: 02113788, 04199900</p>	 	<p>6785-76201 24V</p> <p>Application: Deutz</p> <p>Replaces: Deutz: 02113789, 04199901, 04199904</p>

Deutz

 
12V

24V

6785-76102
12V

Application:
Deutz

Replaces:
Deutz: 02113790, 04199902

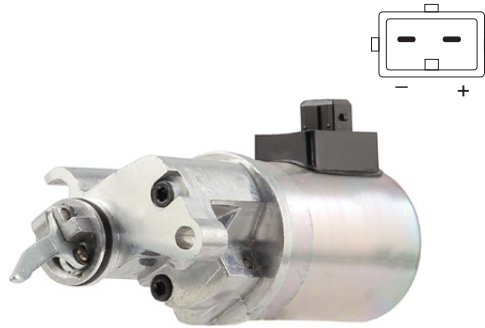

6785-76202
24V

 
Application:
Deutz

Replaces:
Deutz: 02113791, 04199903, 04199905

6785-76103
12V

Application:
Deutz

Replaces:
Deutz: 01181663

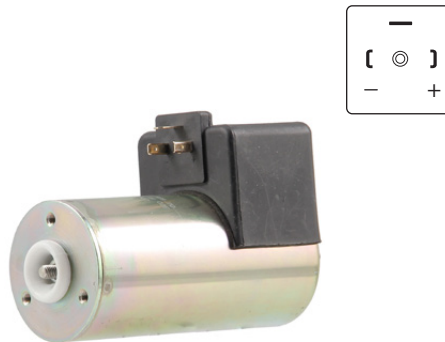

6785-76203
24V

 
Application:
Bobcat, Gehl

Replaces:
Deutz: 01181665

6785-78101
12V

Application:
Bobcat, Deutz, Gehl

Replaces:
Bobcat: 6680121
Deutz: 04272733
Gehl: 133499

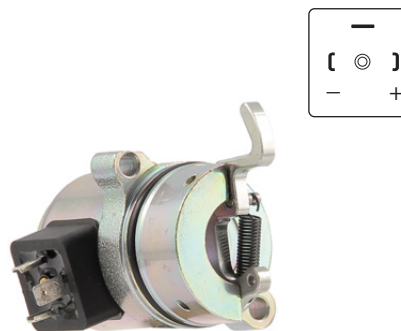

6785-78201
24V

Application:
Deutz

Replaces:
Deutz: 04272734

6785-78102
12V

Application:
Deutz

Replaces:
Deutz: 04287116, 04287583



6785-78202
24V

Application:
Deutz

Replaces:
Deutz: 04287584

12V

24V

6785-78103

 
12V

Application:

Bobcat, Deutz

Replaces:

Deutz: 04272956
Bobcat: 6686715



A= NEG (Black)
B= POS (White)

6785-78104

 
12V

Application:

Deutz, Ford, Volkswagen

Replaces:

Deutz: 04103808, 04103812, 04270581



A= NEG (Black)
B= POS (White)

6785-77102

 
 
12V

Application:

Cummins, Ford, Volkswagen

Replaces:

Cummins: 3935649, 4946639
Ford: BG2X-9N392-AA
Volkswagen: 2UO130764
Synchro-Start: SA-4764-12

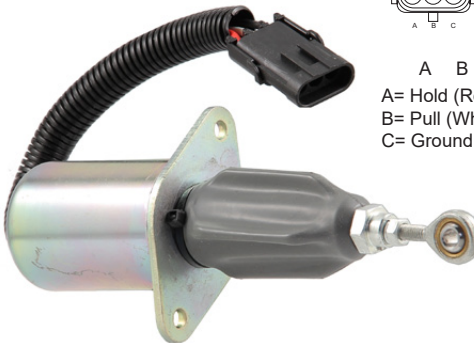

A= Hold (Red)
B= Pull (White)
C= Ground (Black)

6785-77202

24V

Application:

Cummins, Hyster

Replaces:

Cummins: 3935650
Synchro-Start: SA-4764-24

6785-78101

 
 
12V

Application:

Bobcat, Deutz, Gehl

Replaces:

Bobcat: 6680121, 6686715
Deutz: 04272733
Gehl: 133499

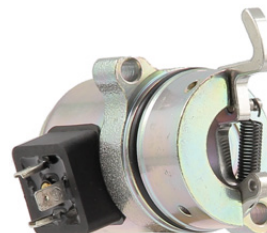

6785-78201

24V

Application:

Deutz

Replaces:

Deutz: 04272734

Hyster, John Deere, Komatsu

 
12V

6785-15110

12V

Application:
Hyster, Perkins

Replaces:
Hyster: 14579006
Perkins: 2848A275, 2848A279
Synchro-Start: SA-4934-12

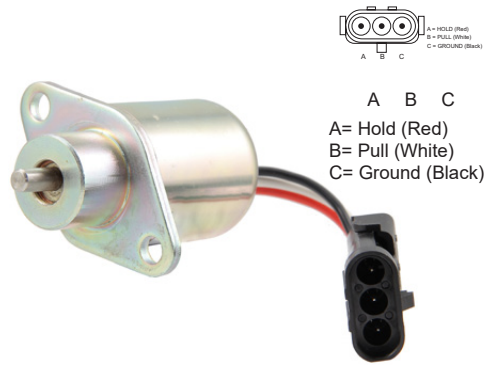

24V

6785-15210

24V

Application:
Hyster, Perkins

 
Replaces:
Synchro-Start: SA-4936-24

6785-15103

12V

Application:
John Deere, Yanmar

Replaces:
John Deere: M810324
Woodward: 1503ES-12S5SUC12
Yanmar: 119233-77932

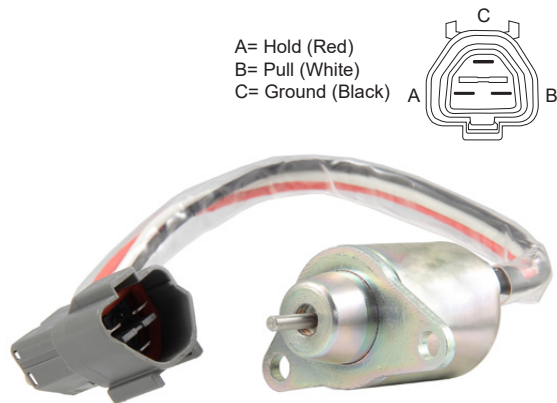

6785-15203

24V

Application:
Yanmar

 
Replaces:
Woodward: 1503ES-24S5SUC12

6785-15105

12V

Application:
Yanmar, John Deere

Replaces:
John Deere: M806808
Synchro-Start: SA-4562T
Woodward: 1503ES-12S5SUC5S
Yanmar: 119653-77950


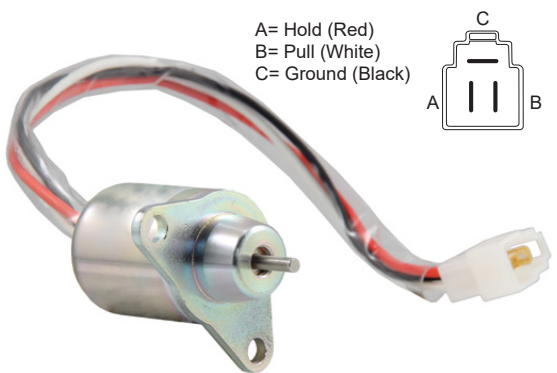


6785-15205

24V

Application:
Yanmar

  Replaces:
Woodward: 1503ES-24S5SUC5S

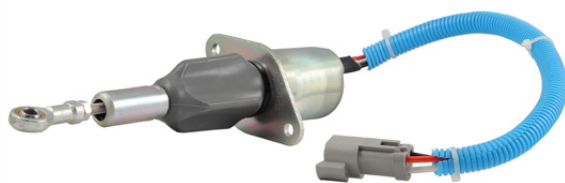

6785-15219

24V

Application:
Cummins, Komatsu

Replacing:
Cummins: 4063712
Komatsu: 674-381-9141
Synchro-Start: SA-5030-24

12V

24V

<p>6785-15101 12V</p> <p>Application: Kubota</p> <p>Replaces: Kubota: 17594-60014 Synchro-Start: SA-4569T Woodward: 1503ES-12A5UC5S</p>	 	<p>6785-15201 24V</p> <p>Application: Kubota</p> <p>Replaces: Woodward: 1503ES-24A5UC5S</p>
<p>6785-15104K 12V</p> <p>Application: Bobcat, Carrier Transicold, Kubota</p> <p>Replaces: Bobcat: 6689034 Carrier Transicold: 25-15230-01, 29-70167-00 Kubota: 1G577-60011 Woodward: 1503ES-12A5UC9S Synchro-Start: SA-4561T</p>	<p>A= Hold (Red) B= Pull (White) C= Ground (Black)</p>  	<p>6785-15204K 24V</p> <p>Application: Carrier Transicold, Kubota</p> <p>Replaces: Woodward: 1503ES-24A5UC9S</p>
<p>6785-15107 12V</p> <p>Application: Kubota</p> <p>Replaces: Woodward: 1503ES-12A5SUC9S</p>	<p>A= Ground (Black) B= Pull (White) C= Hold (Red)</p>  	<p>6785-15207 24V</p> <p>Application: Kubota</p> <p>Replaces: Woodward: 1503ES-24A5SUC9S</p>
<p>6785-15111 12V</p> <p>Application: Kubota</p> <p>Replaces: Kubota: 17208-60016, 17454-60010</p>	 	

Kubota

12V

24V

6785-15112

 
12V

Application:

Kubota

Replaces:

Kubota: 1A021-60017

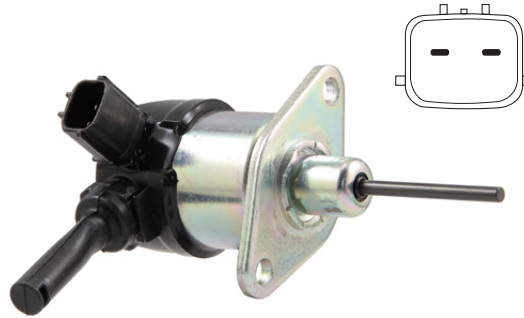

6785-15113

12V

Application:

Kubota

Replaces:

Kubota: 1C010-60015, 1C010-60016



6785-15114

 
12V

Application:

Kubota

Replaces:

Kubota: 1G772-60012, 1G772-60014

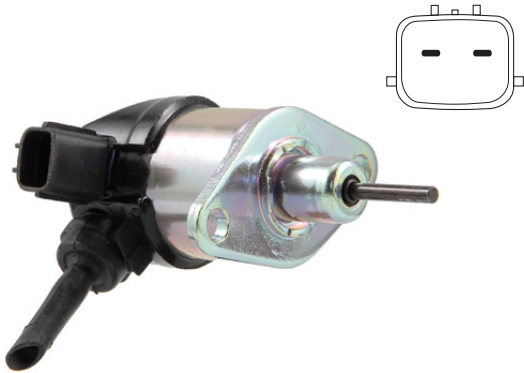

6785-15115

 
12V

Application:

Bobcat, Kubota

Replaces:

Bobcat: 6691498
Kubota: 1G925-60011
Woodward: 1503ES-12A5UC4S

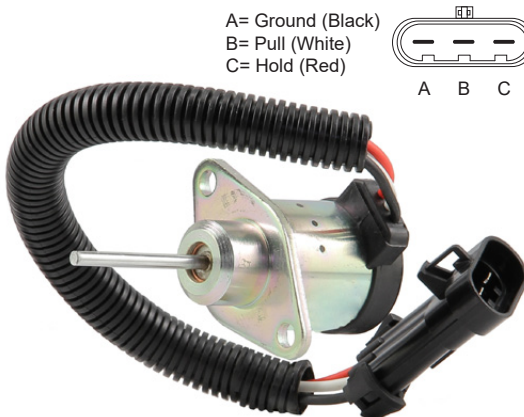

12V

24V

<p>6785-15116 12V</p> <p>Application: Kubota</p> <p>Replaces: Kubota: 17208-60010, 17208-60015</p>		
<p>6785-46101 12V</p> <p>Application: Kubota</p> <p>Replaces: Denso: 052600-100, 052600-1000, 052600-1001 Kubota: 15471-60010</p>		
<p>6785-46102 12V</p> <p>Application: Kubota</p> <p>Replaces: Denso: 052600-453, 052600-4530, 052600-4531 Kubota: 16851-60014</p>		
<p>6785-46103 12V</p> <p>Application: Kubota</p> <p>Replaces: Denso: 052600-4150, 052600-4151 Kubota: 16271-60012</p>		

Kubota, Lister Petter, Mitsubishi

12V

6785-56102

 
12V

Application:

Kubota

Replaces:

Synchro-Start: SA-5176-12
Woodward: 1756ES-12SUC5B1

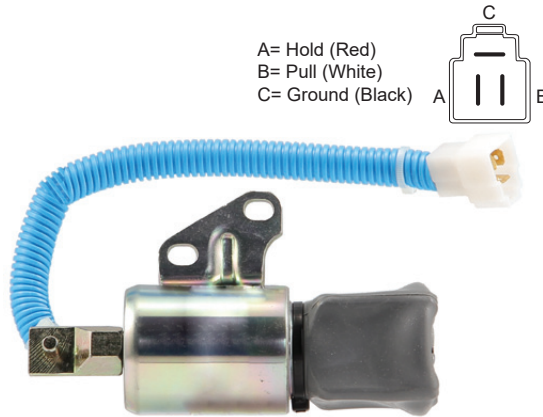

24V

6785-56202

24V

Application:

Kubota

Replaces:

Synchro-Start: SA-5176-24
Woodward: 1756ES-24SUC5B1

6785-50101

 
12V

Application:

Lister Petter

Replaces:

Lister Petter: 36607197
Woodward: 1502-12C7U2B2S1
Synchro-Start: SA-3405T

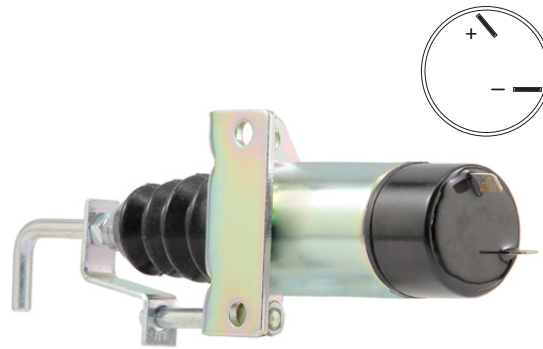

6785-50201

24V

Application:

Lister Petter

Replaces:

Lister Petter: 36607198

6785-15109

 
12V

Application:

Mitsubishi

Replaces:

Mitsubishi: 30A87-10044, 30A87-20404
Synchro-Start: SA-3725-12

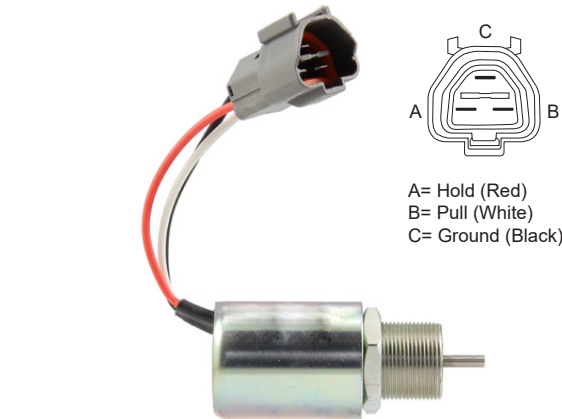

6785-15209

24V

Application:

Mitsubishi

Replaces:

Mitsubishi: 30A87-20402
Synchro-Start: SA-3725-24

6785-20101

 
12V

Application:

Mitsubishi

Replaces:

Synchro-Start: SA-2606-A
Woodward: 2001-12E2U1B1S1A

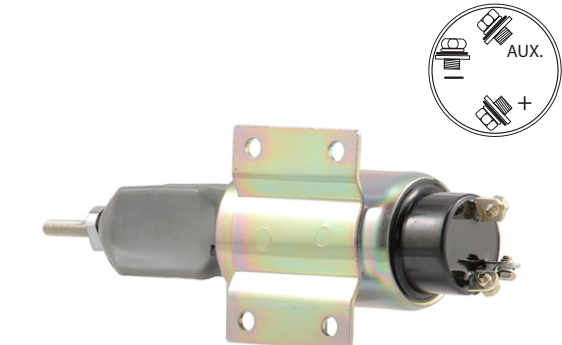

6785-20201

24V

Application:

Perkins

Replaces:

Woodward: 2001-24E2U1B1S1A

12V

24V

<p>6785-15110 12V</p> <p>Application: Hyster, Perkins</p> <p>Replaces: Hyster: 14579006 Perkins: 2848A275, 2848A279 Synchro-Start: SA-4934-12</p>	<p>A= Hold (Red) B= Pull (White) C= Ground (Black)</p>	<p>6785-15210 24V</p> <p>Application: Hyster, Perkins</p> <p>Replaces: Synchro-Start: SA-4934-24</p>
<p>6785-85101 12V</p> <p>Application: Caterpillar, Perkins</p> <p>Replaces: Caterpillar: 173-1338 Perkins: 2848A278</p>	<p>A= Hold (Red) B= Pull (White) C= Ground (Black)</p>	
<p>6785-89101 12V</p> <p>Application: Caterpillar, Perkins</p> <p>Replaces: Caterpillar: 324-4598, 365-3339, 425-7981 Perkins: U85206520</p>	<p>A= Hold (Red) B= Pull (White)</p>	
<p>6785-1511K 12V</p> <p>Application: Thermo King</p> <p>Replaces: Thermo King: 42-100, 41-4306, 41-6383, 41-7886, 41-9100, 71-6383</p>	<p>A= Hold (Red) B= Pull (White) C= Ground (Black)</p>	

Volkswagen, Volvo

12V

6785-77102

 
12V

Application:

Cummins, Ford, Volkswagen

Replaces:

Cummins: 3935649, 4946639
 Ford: BG2X-9N392-AA
 Volkswagen: 2UO130764
 Synchro-Start: SA-4764-12

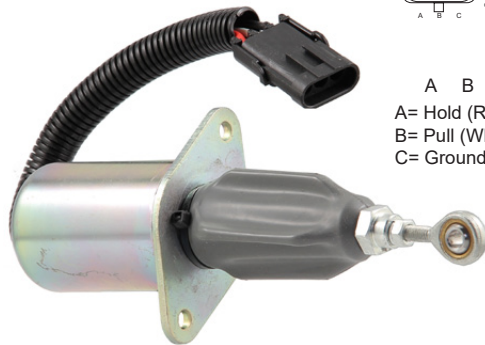

6785-77202

24V

Application:

Cummins

Replaces:

Cummins: 3935650
 Synchro-Start: SA-4764-24

A B C
 A= Hold (Red)
 B= Pull (White)
 C= Ground (Black)

6785-78104

 
12V

Application:

Deutz, Ford, Volkswagen

Replaces:

Deutz: 04103808, 04103812, 04270581

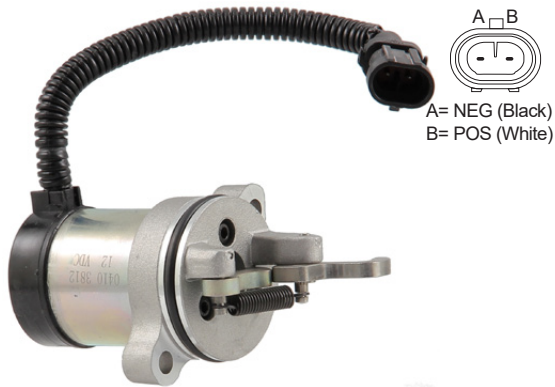

A B
 A= NEG (Black)
 B= POS (White)

6785-2311

 
12V

Application:

Volvo

Replaces:

Woodward: 2003ES-12E2UC4B1

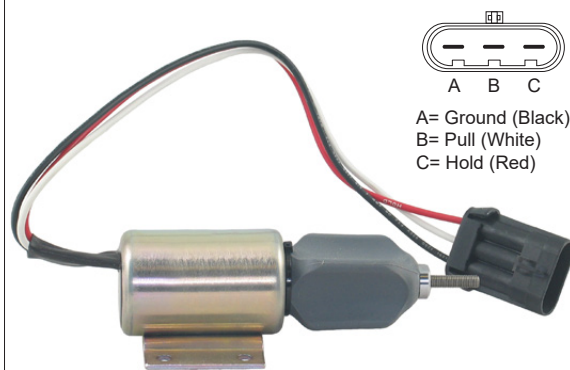

A B C
 A= Ground (Black)
 B= Pull (White)
 C= Hold (Red)

6785-2312

 
12V

Application:

Volvo

Replaces:

Synchro-Start: SA-4632-12
 Woodward: 2003ES-12E2UCB1S4

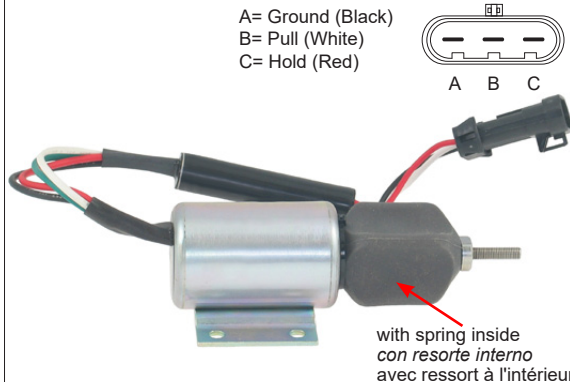







A= Ground (Black)
 B= Pull (White)
 C= Hold (Red)

A B C

with spring inside
 con resorte interno
 avec ressort à l'intérieur

   12V

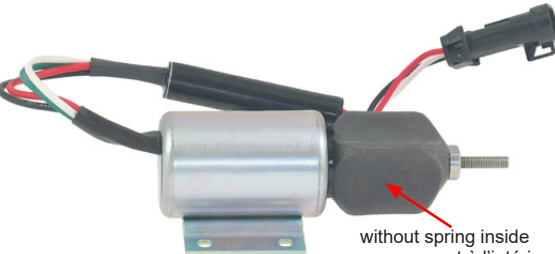24V
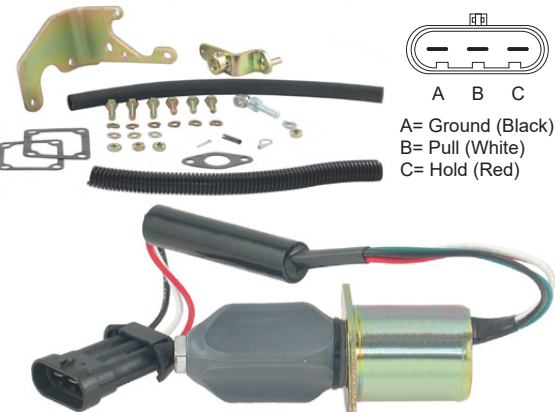 
<p>6785-2313 12V</p> <p>Application: Volvo</p> <p>Replaces: Woodward: 2003ES-12E2UCB1</p>	<p>A= Ground (Black) B= Pull (White) C= Hold (Red)</p>   <p>without spring inside sans ressort à l'intérieur sin resorte adentro</p>	<p>6785-2521 24V</p> <p>Application: Volvo</p> <p>Replaces: Synchro-Start: SA-4646-24</p>
	<p>A= Hold (yellow) B= Pull (White) C= Common (red)</p>  	
<p>6785-5111 12V</p> <p>Application: Volvo</p> <p>Replaces: Woodward: 1751ES-12A6UC4S1</p>	 <p>A B C A= Hold (Red) B= Pull (White) C= Ground (Black)</p>	
<p>6785-5112 12V</p> <p>Application: Volvo</p> <p>Replaces: Synchro-Start: SA-4806-12</p>	 <p>A B C A= Ground (Black) B= Pull (White) C= Hold (Red)</p>	

Volvo

12V

6785-5113

12V

 
Application:

Volvo

Replaces:

Bobcat: 6667993, 6681513
 Cummins: 3832211, 3919422, 3927152,
 3934171, 3934972
 Synchro-Start: SA-4260-12, SA-4754-12
 Woodward: 1753ES-12A6UC3B1
 Yanmar: 129953-77803, 129953-77810

A= Ground (Black)
 B= Pull (White)
 C= Hold (Red)



24V

6785-5121

 
24V

Application:


Volvo

Replaces:

Woodward: 1751ES-24A7UC10B1S5



 A= Hold (yellow)
 B= Pull (White)
 C= Common (red)

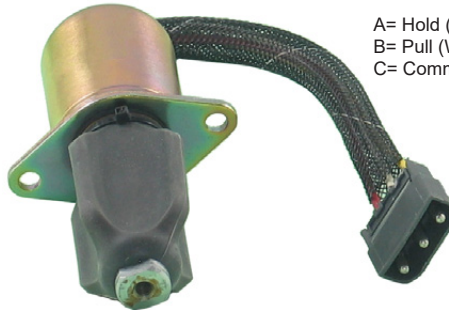

6785-5221

24V

 
Application:

Volvo

Replaces:

Woodward: 1752ES-24A7UC10B,
 1752ES-24A7UC10B1S5

A= Hold (yellow)
 B= Pull (White)
 C= Common (red)



6785-5311

12V

 
 
Application:

Volvo

Replaces:

 

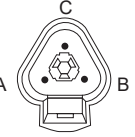 

 

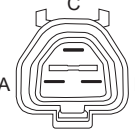 

Synchro-Start: SA-4805-12

A= Ground (Black)
 B= Pull (White)
 C= Hold (Red)

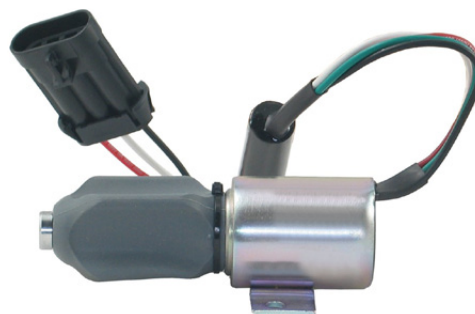

12V

24V

	<p>A= Hold (yellow) B= Pull (White) C= Common (red)</p>  	<p>6785-5621 24V</p> <p>Application: Yanmar</p> <p>Replaces: Woodward: 1756ES-DB24E3UC1</p>
<p>6785-15102 12V</p> <p>Application: Yanmar</p> <p>Replaces: Synchro-Start: SA-4564, SA-4717 Woodward: 1503ES-12S5SUC11</p>	<p>A= Hold (Red) B= Pull (White) C= Ground (Black)</p>  	<p>6785-15202 24V</p> <p>Application: Yanmar</p> <p>Replaces: Synchro-Start: SA-4920, SA-4922 Woodward: 1503ES-24S5SUC11</p>
<p>6785-5113 12V</p> <p>Application: Bobcat, Cummins, Volvo, Yanmar</p> <p>Replaces: Bobcat: 6667993, 6681513 Cummins: 3832211, 3919422, 3927152, 3934171, 3934972 Synchro-Start: SA-4260-12, SA-4754-12 Woodward: 1753ES-12A6UC3B1 Yanmar: 129953-77803, 129953-77810</p>	<p>A= Ground (Black) B= Pull (White) C= Hold (Red)</p>  	
<p>6785-15103 12V</p> <p>Application: John Deere, Yanmar</p> <p>Replaces: John Deere: M810324 Yanmar: 119233-77932</p> <p>Woodward: 1503ES-12S5SUC12</p>	<p>A= Hold (Red) B= Pull (White) C= Ground (Black)</p>  	<p>6785-15203 24V</p> <p>Application: Yanmar</p> <p>Replaces: Woodward: 1503ES-24S5SUC12</p>

Yanmar

12V

6785-15105

 
12V

Application:

John Deere, Yanmar

Replaces:

John Deere: M806808
 Synchro-Start: SA-4562T
 Woodward: 1503ES-12S5SUC5S
 Yanmar: 119653-77950

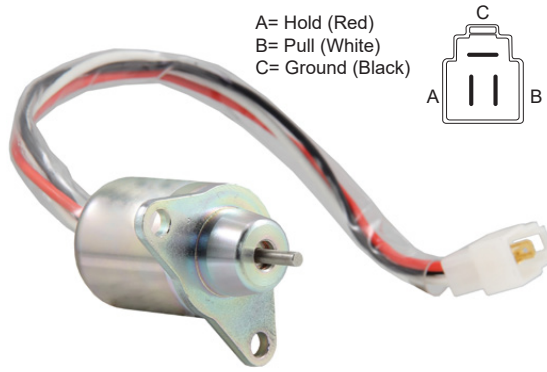

A= Hold (Red)
 B= Pull (White)
 C= Ground (Black)

24V

6785-15205

24V

Application:

Yanmar

Replaces:

Woodward: 1503ES-24S5SUC5S

CROSS REFERENCE • GUIDE DE REFÉRENCE • CRUCE DE REFERENCIAS

	PART NUMBER	PAG.
BOBCAT		
6667993	6785-5113	1, 5, 19
6680121	6785-78101	2, 8, 9
6681512	6785-15100	1
6681513	6785-5113	1, 5, 19
6686715	6785-78103	2, 9
6689034	6785-15104K	1, 2, 11
6691498	6785-15115	1, 12

CARRIER TRANSICOLD		
25-15230-01	6785-15104K	1, 2, 11
25-38109-00	6785-15106K	2
25-38109-02SV	6785-15106K	2
25-38109-03ASV	6785-15106K	2
25-38109-03SV	6785-15106K	2
25-38109-04	6785-15106K	2
25-38109-04SV	6785-15106K	2
25-38109-05	6785-15106K	2
25-38109-05SV	6785-15106K	2
25-38109-06	6785-15106K	2
25-38109-06SV	6785-15106K	2
29-70167-00	6785-15104K	1, 2, 11

CASE-IH		
J932529	6785-77101	3, 6

CATERPILLAR		
110-6465	6785-87201	4
110-6466	6785-87101	4
125-5771	6785-87104	5
125-5772	6785-87204	5
125-5773	6785-88101	5
125-5774	6785-88201	5
155-4651	6785-87103	4
155-4652	6785-87203	4
155-4653	6785-86201	4
173-1338	6785-85101	3, 15
324-4598	6785-89101	5, 15
365-3339	6785-89101	5, 15
425-7981	6785-89101	5, 15
4N-3889	6785-84101	3
4N-3890	6785-84201	3
6N-9987	6785-87202	4
6N-9988	6785-87102	4

	PART NUMBER	PAG.
CATERPILLAR		
6T-4121	6785-88201	5
6T-4122	6785-88201	5
8C-3663	6785-87203	4
8C-3664	6785-87103	4
9X-5312	6785-87104	5

CUMMINS		
3832211	6785-5113	1, 5, 19
3864274	6785-15108	3, 6
3919422	6785-5113	1, 5, 19
3927152	6785-5113	1, 5, 19
3934171	6785-5113	1, 5, 19
3934972	6785-5113	1, 5, 19
3935649	6785-77102	7, 9, 16
3935650	6785-77202	7, 9, 16
3974947	6785-51101	6
3991167	6785-77101	3, 6
3991168	6785-77201	3, 6
4063712	6785-15219	6, 10
4946639	6785-77102	7, 9, 16

DENSO		
052600-100	6785-46101	13
052600-1000	6785-46101	13
052600-1001	6785-46101	13
052600-4150	6785-46103	13
052600-4151	6785-46103	13
052600-453	6785-46102	13
052600-4530	6785-46102	13
052600-4531	6785-46102	13

DEUTZ		
01181663	6785-76103	8
01181665	6785-76203	8
02113788	6785-76101	7
02113789	6785-76201	7
02113790	6785-76102	8
02113791	6785-76202	8
04103808	6785-78104	9, 16
04103812	6785-78104	9, 16
04199900	6785-76101	7
04199901	6785-76201	7
04199902	6785-76102	8

CROSS REFERENCE • GUIDE DE RÉFÉRENCE • CRUCE DE REFERENCIAS

	PART NUMBER	PAG.
DEUTZ		
04199903	6785-76202	8
04199904	6785-76201	7
04199905	6785-76202	8
04234373	6785-72101	7
04270581	6785-78104	9, 16
04272733	6785-78101	2, 8, 9
04272734	6785-78201	2, 8, 9
04272956	6785-78103	2, 9
04287116	6785-78102	8
04287583	6785-78102	8
04287584	6785-78202	8
3309F139	6785-72101	7
35DZS1E2	6785-72101	7
FORD		
BG2X-9N392-AA	6785-77102	7, 9, 16
GEHL		
133499	6785-78101	2, 8, 9
HYSTER		
14579006	6785-15110	10, 15
JOHN DEERE		
M806808	6785-15105	10, 20
M810324	6785-15103	10, 19
KOMATSU		
6743-81-9141	6785-15219	6, 10
KUBOTA		
15471-60010	6785-46101	13
16271-60012	6785-46103	13
16851-60014	6785-46102	13
17208-60010	6785-15116	13
17208-60015	6785-15116	13
17208-60016	6785-15111	11
17454-60010	6785-15101	11
17594-60014	6785-15101	11
1A021-60017	6785-15112	12
1C010-60015	6785-15113	12
1C010-60016	6785-15113	12
1G577-60011	6785-15104K	1, 2, 11

	PART NUMBER	PAG.
KUBOTA		
1G772-60012	6785-15114	12
1G772-60014	6785-15114	12
1G925-60011	6785-15115	1, 12
16616-60010	6785-15101	11
16616-60013	6785-15101	11
16616-60015	6785-15101	11
LISTER PETER		
36607197	6785-50101	14
36607198	6785-50201	14
MITSUBISHI		
30A87-10044	6785-15109	14
30A87-20402	6785-15209	14
30A87-20404	6785-15109	14
PERKINS		
2848A275	6785-15110	10, 15
2848A278	6785-85101	3, 15
2848A279	6785-15110	10, 15
U85206520	6785-89101	5, 15
SYNCRO-START / WOODWARD		
SA-2606-A	6785-20101	14
SA-3405T	6785-50101	14
SA-3725-12	6785-15109	14
SA-3725-24	6785-15209	14
SA-3742-12	6785-51101	6
SA-3742-24	6785-51201	6
SA-3765-12	6785-51102	7
SA-3765-24	6785-51202	7
SA-3766T	6785-15108	3, 6
SA-4260-12	6785-5113	1, 5, 19
SA-4532-12	6785-2312	16
SA-4561T	6785-15104K	1, 2, 11
SA-4562T	6785-15105	10, 20
SA-4564	6785-15102	19
SA-4569T	6785-15101	11
SA-4646-24	6785-2521	17
SA-4668-S	6785-15106K	2
SA-4717	6785-15102	19
SA-4754-12	6785-5113	1, 5, 19
SA-4764-12	6785-77102	7, 9, 16

CROSS REFERENCE • GUIDE DE RÉFÉRENCE • CRUCE DE REFERENCIAS

	PART NUMBER	PAG.
SYNCRO-START / WOODWARD		
SA-4764-24	6785-77202	7, 9, 16
SA-4805-12	6785-5311	18
SA-4806-12	6785-5112	17
SA-4920	6785-15202	19
SA-4922	6785-15202	19
SA-4934-12	6785-15110	10, 15
SA-4934-24	6785-15210	10, 15
SA-4941-12	6785-77101	3, 6
SA-4941-24	6785-77201	3, 6
SA-5019	6785-15106K	2
SA-5030-24	6785-15219	6, 10
SA-5157	6785-15106K	2
SA-5176-12	6785-56102	14
SA-5176-24	6785-56202	14

THERMO KING		
41-4306	6785-1511K	15
41-6383	6785-1511K	15
41-7886	6785-1511K	15
41-9100	6785-1511K	15
42-100	6785-1511K	15
71-6383	6785-1511K	15

VOLKSWAGEN		
2UO130764	6785-77102	7, 9, 16

VOLVO		16 - 19
--------------	--	---------

WOODWARD		
1502-12C7U2B2S1	6785-50101	14
1503ES-12A5SUC9S	6785-15107	11
1503ES-12A5SUC9SCC28	6785-15106K	2
1503ES-12A5SUC9SCG28	6785-15106K	2
1503ES-12A5UC4S	6785-15115	1, 12
1503ES-12A5UC5S	6785-15101	11
1503ES-12A5UC9S	6785-15104K	1, 2, 11
1503ES-12S5SUC11	6785-15102	19
1503ES-12S5SUC12	6785-15103	10, 19
1503ES-12S5SUC5S	6785-15105	10, 20
1503ES-24A5SUC9S	6785-15207	11
1503ES-24A5SUC9SCC28	6785-15206K	2
1503ES-24A5SUC9SCG28	6785-15206K	2
1503ES-24A5UC5S	6785-15201	11

	PART NUMBER	PAG.
WOODWARD		
1503ES-24A5UC9S	6785-15204K	1, 2, 11
1503ES-24S5SUC11	6785-15202	19
1503ES-24S5SUC12	6785-15203	10, 19
1503ES-24S5SUC5S	6785-15205	10, 20
1751-12E7U1B1S5A	6785-15108	3, 6
1751-24E7U1B1S5A	6785-15208	3, 6
1751ES-12A6UC4S1	6785-5111	17
1751ES-24A7UC10B1S5	6785-5121	18
1752ES-24A7UC10B	6785-5221	18
1752ES-24A7UC10B1S5	6785-5221	18
1753ES-12A6UC3B1	6785-5113	1, 5, 19
1756ES-12SUC5B1	6785-56102	14
1756ES-24SUC5B1	6785-56202	14
1756ESDB-24E3UC1	6785-5621	19
2001-12E2U1B1S1A	6785-20101	14
2001-24E2U1B1S1A	6785-20201	14
2003ES-12E2UC4B1	6785-2311	16
2003ES-12E2UCB1	6785-2313	17
2003ES-12E2UCB1S4	6785-2312	16
SA-2606-A	6785-20101	14
SA-3405T	6785-50101	14
SA-3725-12	6785-15109	14
SA-3725-24	6785-15209	14
SA-3742-12	6785-51101	6
SA-3742-24	6785-51201	6
SA-3765-12	6785-51102	7
SA-3765-24	6785-51202	7
SA-3766T	6785-15108	3, 6
SA-4260-12	6785-5113	1, 5, 19
SA-4532-12	6785-2312	16
SA-4561T	6785-15104K	1, 2, 11
SA-4562T	6785-15105	10, 20
SA-4564	6785-15102	19
SA-4569T	6785-15101	11
SA-4646-24	6785-2521	17
SA-4668-S	6785-15106K	2
SA-4717	6785-15102	19
SA-4754-12	6785-5113	1, 5, 19
SA-4764-12	6785-77102	7, 9, 16
SA-4764-24	6785-77202	7, 9, 16
SA-4805-12	6785-5311	18
SA-4806-12	6785-5112	17
SA-4920	6785-15202	19

CROSS REFERENCE • GUIDE DE RÉFÉRENCE • CRUCE DE REFERENCIAS

	PART NUMBER	PAG.
SA-4922	6785-15202	19
SA-4934-12	6785-15110	10, 15
SA-4934-24	6785-15210	10, 15
SA-4941-12	6785-77101	3, 6
SA-4941-24	6785-77201	3, 6
SA-5019	6785-15106K	2
SA-5030-24	6785-15219	6, 10
SA-5157	6785-15106K	2
SA-5176-12	6785-56102	14
SA-5176-24	6785-56202	14
YANMAR		
129953-77803	6785-5113	1, 5, 19
129953-77810	6785-5113	1, 5, 19
119233-77932	6785-15103	10, 19
119653-77950	6785-15105	10, 20

Distributed by
Distribué par
Distribuido por

9800-SOS-017 - 170314 - Rev.: 200922

Corporate Headquarters
Manufacturing, Sales and Distribution

Dixie Electric Ltd.
517 Basaltic Road
Concord, ON. Canada L4K 4W8

Tel. 905-879-0533 Fax 905-879-0532
Canada 800-461-5799 U.S.A. 800-563-3933

E-Mail: sales@dixie-electric.com
www.dixie-electric.com



U.S.A.
Sales and Distribution

Dixie Electric Inc.
5600 Pioneer Creek Drive, Suite D
Maple Plain, MN 55359. U.S.A.

Tel. 763-475-6629 800-478-0608
Fax 763-475-6635 800-392-8719

E-Mail: mn.sales@dixie-electric.com
www.dixie-electric.us